 



Installation Information

Zebra Blind

Parts Included

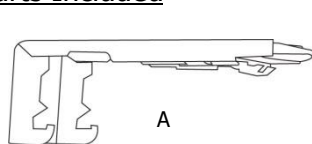

 Bracket
Qty: 2, 3, 4*



Child Safety Device
Qty: 1



Installation
Screws
Qty: 4, 6, 8*



Child Safety
Screw
Qty: 1

* The quantity of brackets and screws supplied will vary depending on the width of the blind

 
Important Notes

- Please check that all parts have been supplied before you begin to assemble your new Zebra Blind
- Do not operate the blind until it is fully installed
- The finished blind width is from the end of the left hand side of the head rail to the end of the right hand side of the head rail
- Ensure that the blind is mounted level for correct operation

Positioning Blind

As per your order, determine the correct fitting location of mounting brackets and mark where you are going to install the brackets.

- Inside the window frame (Inside Mount) or;
- On the window frame or wall (Outside Mount)

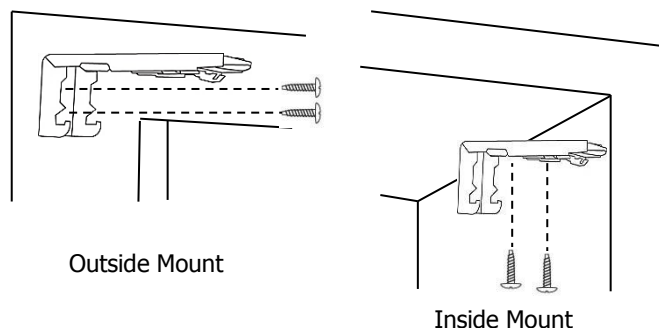

Installing Mounting Brackets

- The brackets should be installed approximately 100mm in from each end of the head rail
- Place the bracket (part A) in the desired location, as per your order i.e. on the LHS or RHS, mark and if necessary pre drill 2 holes. After drilling the holes, secure the bracket with screws (part C). (Timber screws have been provided, however screws suitable for gyprock or brick walls may need to be purchased)
- Repeat this process for the second bracket (part A)

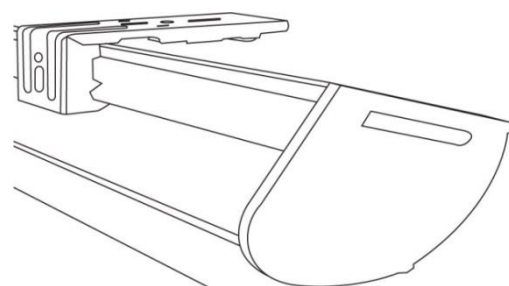 


Figure 1

Attaching Blind to Brackets

- Align the back of the headrail with the bottom hooks on the bracket (Figure 1)
- Lift the front of the headrail so that the clips on the front of the head rail lock into place (Figure 2)
- To release, press the clear plastic release button on the front of each bracket and lower the front of the headrail

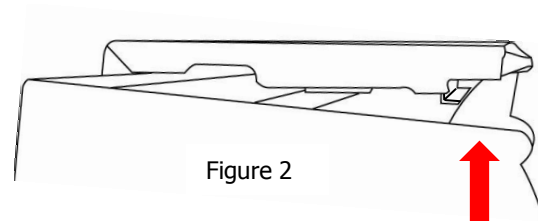 


Figure 2

Operating the Blind

Using the cord/chain, draw the blind up and down several times to ensure the blind operates correctly.

Attaching Child Safety Device (For more safety information, please see over page)

Secure the child safety device (part B) to the wall beside the blind, ensuring the cord/chain is not too tight, as this may restrict smooth operation.

Installation Information

 
Zebra Blind Safety Information

Child Safety Instructions

For Blinds With Chain/Cord Control

Warning

- The chain/cord tension device must be fitted to ensure child safety
- The chain tension device is to be positioned at the bottom of the chain/cord loop
- It can be fitted to the inside of the reveal (frame) or in front of the reveal (frame)



Child Safety Device

Fitting Instructions

1. Position the tension device at the bottom of the chain/cord loop (Figure 1)
2. Install the tension device onto the reveal/frame using child safety screw (part D), making sure that the loop chain/cord hangs with minimal tension (Figure 2)

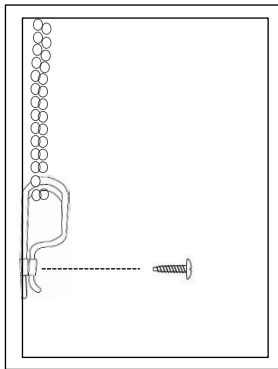 


Figure 1

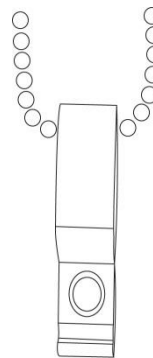 


Figure 2



WARNING – ALL WINDOW COVERINGS WITH CORD OR CHAIN

To avoid creating a possible strangulation hazard for children, the corded or chained internal window covering must be installed in such a way that a loose cord or chain cannot form a loop 220mm or longer at a height of less than 1600mm above floor level.

- A cord/chain guide may be installed lower than 1600mm above floor level if the cord/chain is sufficiently secured or tensioned to prevent a loop 220mm or longer being formed
- If a cord/chain guide is installed lower than 1600mm above floor level, it must be designed to prevent a child from being able to remove the cord/chain
- If a cleat is used to secure the cord, it must be at least 1600mm above floor level because a child is capable of unwinding a cord from a cleat